

SECTION 02226

REMOVE CONCRETE SLOPE PROTECTION

PART 1 GENERAL

1.1 SECTION INCLUDES

- A. Remove portions of the existing slope protection and the cutoff wall where required.

PART 2 PRODUCTS Not used

PART 3 EXECUTION

3.1 PREPARATION

- A. The Engineer approved flow limits of the concrete slope protection removal.

3.2 REMOVAL

- A. At the designated areas, saw cut the existing slope protection to full depth where necessary.
- B. Do not damage or affect in any way the portions of concrete slope protection that are to remain.

3.3 DISPOSAL

- A. Dispose of the removed material in an environmentally safe area.

END OF SECTION